



Installing the F3 Multi LCD Holster

Step 1: Remove your Multi Cart from the mother board. Turn it face down and remove the 7 screws holding the bottom in place and remove the bottom plate.


Step 2: Lift the Multi Cart PCB up off of the alignment posts and slide it back slightly by about 2cm (about 1in).

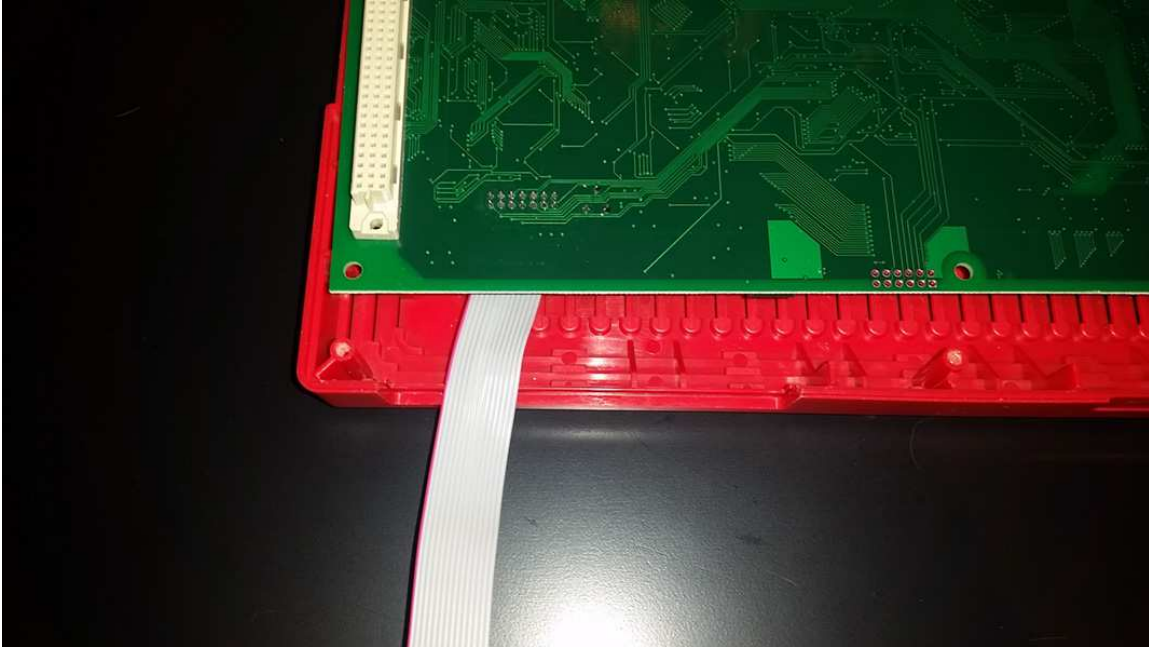


Step 3: Gently fold your ribbon cable in half as shown. If your PCB is equipped with a reset wire and it's routed through this opening: placing the wire in the center of the fold is ideal.

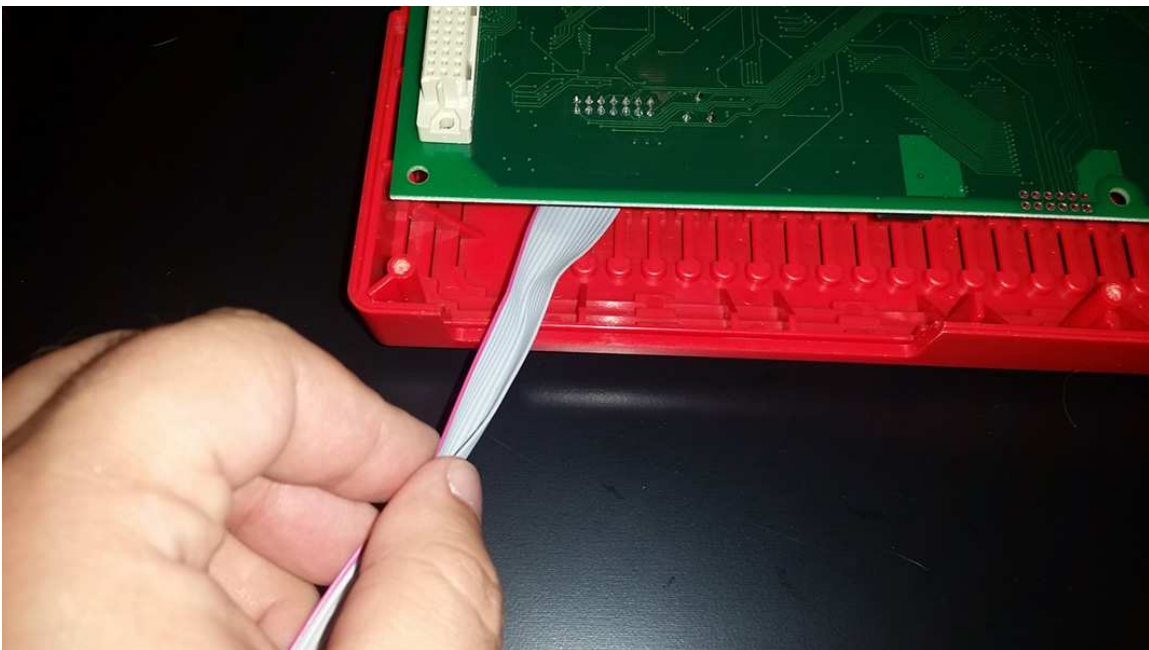

Step 4: Drop the holster down from above at an angle as shown. Don't push it all the way down yet. You'll want to ensure that the wires are inside the wire pass-through on the left and the right side of the holster mount is lined up in the slot.

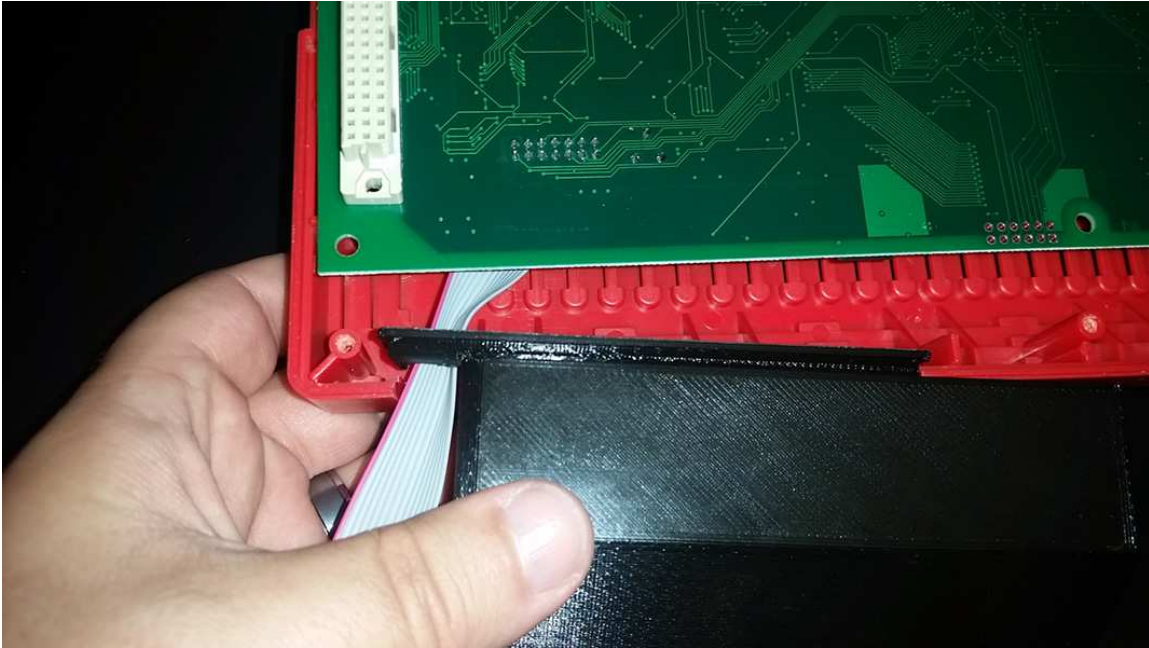

Step 5: Once the wires and the right side of the mount are in place line up the left side of the mount, you may need to push the holster to the right slightly to ensure it's fully seated. Once everything is lined up, push the whole assembly down into the cart housing, while making sure not to pinch the wires.

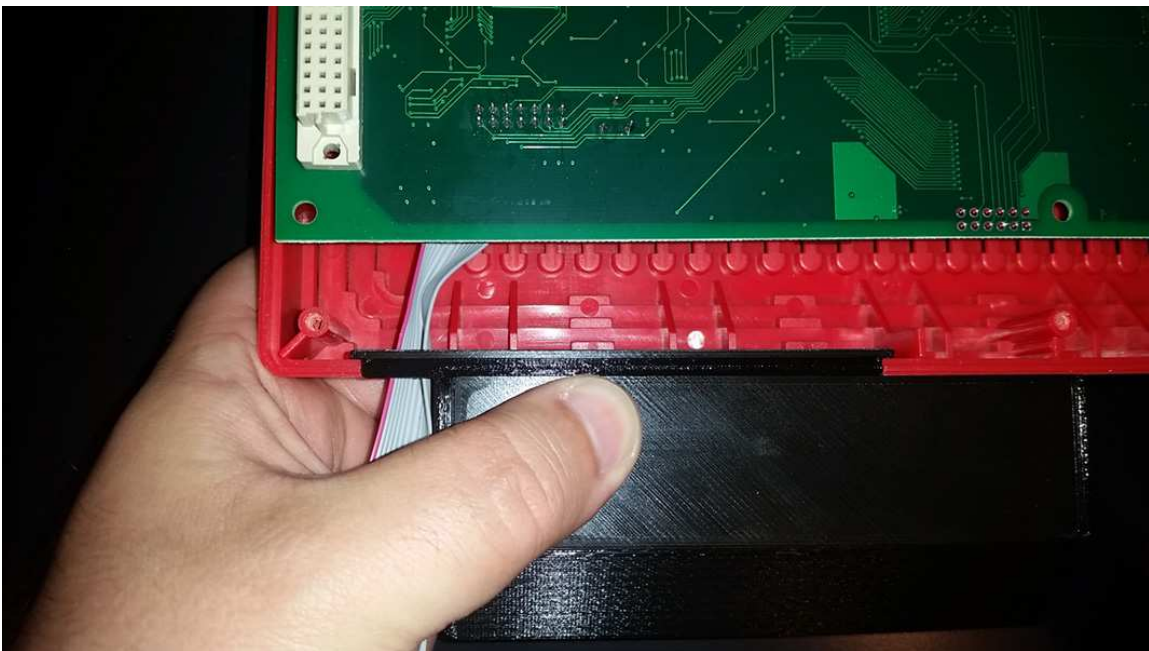

Step 6: Once the holster is fully seated into the upper cart housing slide the PCB back down into place.

Step 7: Reinstall the lower Cart housing and the 7 screws, and then reinstall your Multi Cart back on to the motherboard and enjoy.